



# **STEP ONE :**

Assemble your Front & Rear Bow pieces by inserting the screws as shown below.

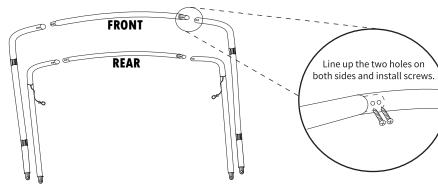

## PACKAGE CONTENTS

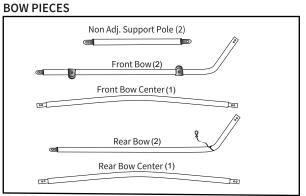

### HARDWARE


(8)) #100340

### **TOOLS REQUIRED**

\*Phillips and Flat Head Screwdrivers


# **STEP TWO :**

Lay bimini fabric face down on a flat clean surface. (Label will be sewn into the rear sleeve)

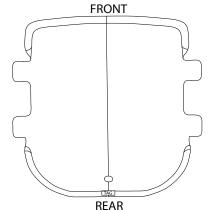


## **STEP THREE :**

Position the Front Bow with the top jaw slide opening face up. Thread the bow through the front sleeve.

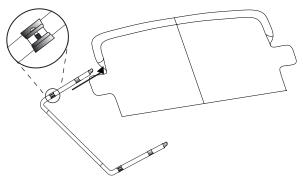


## <u>STEP FIVE :</u>

Attach the 8" leg extention to the top jaw side. Your Bimini is now fully assembled and is ready to install onto your Monster Tower<sup>®</sup>.

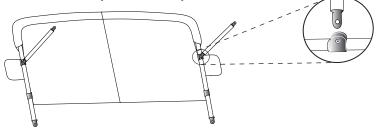

## **STEP FOUR :**

Position the Rear Bow so that the strap is facing upwards and the rivet head is facing down towards the canvas. Thread the bow through the sleeve.

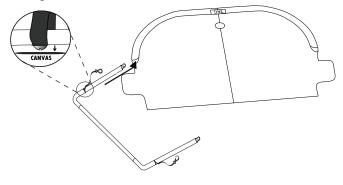




# **WESTLAND**

OVER TOWER BIMINI TOP - BREAKDOWN VERSION MOUNTING INSTRUCTIONS

TOWERS BASES MEASURING - 72" OR MORE

westlandcovers.com phone# 800-835-7992

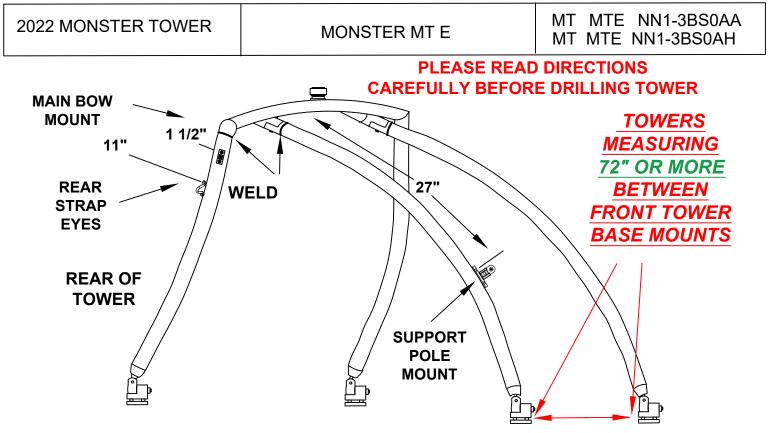

1) MEASURE 27" DOWN FROM CENTER OF WELD, ON FRONT LEG OF TOWER, TO CENTER OF TOP HOLE IN 180 DEGREE SWIVEL SUPPORT POLE MOUNT . CENTER MOUNT ON FRONT OF TOWER LEG, TWISTKNOB TOWARD INSIDE OF TOWER. USE #10 X 3/4" TEK SCREWS. 2) MEASURE 1 1/2" DOWN FROM CENTER OF WELD ON REAR LEG TO CENTER OF TOP HOLE ON MAIN BOW SIDE MOUNT. CENTER MOUNT ON OUTSIDE OF TOWER LEG. PLACE TWISTKNOB IN MOUNT TOWARD OUTSIDE OF TOWER. USE #10 X 3/4" TEK SCREWS. 3) MEASURE 11" DOWN FROM CENTER OF WELD ON REAR LEG TO CENTER OF TOP HOLE IN STRAP EYE, CENTER STRAP EYE ON BACKSIDE OF TOWER LEG, USE #8 X 3/4" TEK SCREWS.

### HARDWARE PACKAGED

- 2 200880 MOUNT SIDE S/S W/BOLT
- 2 200831 DECK HINGE 180 SS
- 4 101180 BLACK TWISTKNOBS 1/4" 20 X 1"
- 2 101060 STRAP EYES
- 8 100470 #10 X 3/4" PHIL FLAT TEK SCREW
- 4 100390 #8 X 3/4" PHIL FLAT TEK SCREWS

### ASSEMBLY PACKAGED


8 - 100340 #8 X 5/8" SCREW



MOUNTING INSTRUCTIONS

# TOWERS BASES MEASURING - 72" OR LESS

westlandcovers.com phone# 800-835-7992

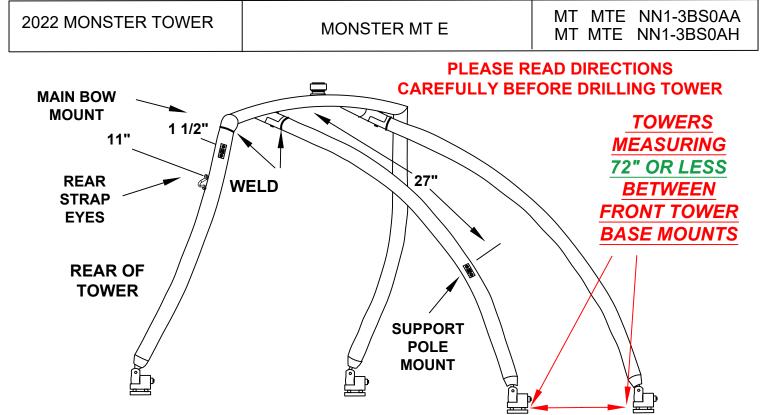

1) MEASURE 27" DOWN FROM CENTER OF WELD, ON FRONT LEG OF TOWER, TO CENTER OF TOP HOLE IN 180 DEGREE SWIVEL SUPPORT POLE MOUNT . CENTER MOUNT ON OUTSIDE OF FRONT TOWER LEG, TWISTKNOB TOWARD OUTSIDE OF TOWER. USE #10 X 3/4" TEK SCREWS. 2) MEASURE 1 1/2" DOWN FROM CENTER OF WELD ON REAR LEG TO CENTER OF TOP HOLE ON MAIN BOW SIDE MOUNT. CENTER MOUNT ON OUTSIDE OF TOWER LEG. PLACE TWISTKNOB IN MOUNT TOWARD OUTSIDE OF TOWER. USE #10 X 3/4" TEK SCREWS. 3) MEASURE 11" DOWN FROM CENTER OF WELD ON REAR LEG TO CENTER OF TOP HOLE IN STRAP EYE, CENTER STRAP EYE ON BACKSIDE OF TOWER LEG. USE #8 X 3/4" TEK SCREWS.

### HARDWARE PACKAGED

- 2 200880 MOUNT SIDE S/S W/BOLT
- 2 200831 DECK HINGE 180 SS
- 4 101180 BLACK TWISTKNOBS 1/4" 20 X 1"
- 2 101060 STRAP EYES
- 8 100470 #10 X 3/4" PHIL FLAT TEK SCREW
- 4 100390 #8 X 3/4" PHIL FLAT TEK SCREWS

ASSEMBLY PACKAGED 8 - 100340 #8 X 5/8" SCREW